



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

D206-642-512
Job Sheet 201409



Part No: D206-642-512

Job Qty: 1 pcs

Part Name: Skidtube RH, High Gear, Standard Wearplates, DART (Apical) Tri-Bag Float Comp.



Part Weight: 0 lbs

Status: New

Priority: Medium

Job Created: 10/3/19

Job Tracking No:

Created By: Marie Lajeunesse

Due Date: 11/15/19

Description: SIOP

Type: Stock

Note: DWG REV Q SHEETS 33-34 IPP Rev:B 05.09.23 Revised per D206-642 Rev. J KJ/JLM IPP Rev:C 07-02-23
As per IIN D206-642 Rev K JLM IPP rev D 07.06.06 added K642-512 EC IPP Rev:E 07-12-05 ECN 1080p Rev
L DD verified by: IPP REV:F 13.09.06 CHG005/ ECN13-634 DD VERF:JLM IPP REV:G 14.04.28 AS PER
ECN14-520 DD VERF:JLM

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup Hrs	Run Hrs	Workcenter / Supplier	Lead Time	
110	Packaging 1 - Pick Kit	1 pcs		11/15/19	0.00	0.00	Packaging 1 - 1		
							Packaging 1 - 2		
							Packaging 1 - 3		
							Packaging 1 - 4		
							Packaging 1 - 5		
							Packaging 1 - 6		
							Packaging 1 - 7		
							Packaging 1 - 8		
							Packaging 1 - 9		
							Packaging 1 - 10		
							Packaging 1 - 11		
							Packaging 1 - 12		
							Packaging 1 - 13		
							Packaging 1 - 14		
							Packaging 1 - 15		
							Packaging 1 - 16		
							Packaging 1 - 17		
							Packaging 1 - 18		
							Packaging 1 - 19		
							Packaging 1 - 20		
							Packaging 1 - 21		
							Packaging 1 - 22		
							Packaging 1 - 23		
							Packaging 1 - 24		
							Packaging 1 - 25		
							Packaging 1 - 26		
							Packaging 1 - 27		
							Packaging 1 - 28		
							Packaging 1 - 29		

Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
Canada
TEL: 1 613 632-5200
Email: sales@dartaero.com
www.dartaerospace.com



Container No: S229805



Part: D206-642-512

Job No: 201409

Serial No/Batch: S229805

Revision:

Inspector:

Exp Date:

Instructions: FAA STC SA00475SE 18/04/17 JCS/STC SH98 -

Plex 10/3/19 9:12 AM Dart.lajeunesse.marie

120	QC 4	1 pcs	11/15/19	0.00 0.00	Packaging 1 - 30	
					Packaging 1 - 31	
					Packaging 1 - 32	
					Packaging 1 - 33	
					Packaging 1 - 34	
					Packaging 1 - 35	
					Packaging 1 - 36	
					QC 4 - 28	
					QC 4 - 58	
					QC 4 - 69	
					QC 4 - 9	
					QC 4 - 46	
					QC 4 - 68	
					QC 4 - 72	
					QC 4 - 74	
					QC 4 - 75	DAS 78 NOV 07 2019
					QC 4 - 78	9-89
130	Packaging 3-1 - Stock - B4B	1 pcs	11/15/19	0.00 0.00	Packaging 3 - 1 - B4B	
					Packaging 3 - 2 - B4B	
					Packaging 3 - 3 - B4B	
					Packaging 3 - 4 - B4B	
					Packaging 3 - 5 - B4B	
					Packaging 3 - 6 - B4B	
					Packaging 3 - 7 - B4B	
					Packaging 3 - 8 - B4B	
					Packaging 3 - 9 - B4B	
					Packaging 3 - 10 - B4B	
					Packaging 3 - 11 - B4B	
					Packaging 3 - 12 - B4B	
					Packaging 3 - 13 - B4B	
					Packaging 3 - 14 - B4B	
					Packaging 3 - 15 - B4B	
					Packaging 3 - 16 - B4B	
					Packaging 3 - 17 - B4B	
					Packaging 3 - 18 - B4B	
					Packaging 3 - 19 - B4B	
					Packaging 3 - 20 - B4B	
					Packaging 3 - 21 - B4B	
					Packaging 3 - 22 - B4B	
					Packaging 3 - 23 - B4B	
					Packaging 3 - 24 - B4B	
					Packaging 3 - 25 - B4B	DAS 78 NOV 07 2019
					Packaging 3 - 26 - B4B	9-89
					Packaging 3 - 27 - B4B	
					Packaging 3 - 28 - B4B	
					Packaging 3 - 29 - B4B	
					Packaging 3 - 30 - B4B	
					Packaging 3 - 31 - B4B	
					Packaging 3 - 32 - B4B	
					Packaging 3 - 33 - B4B	
					Packaging 3 - 34 - B4B	
					Packaging 3 - 35 - B4B	
					Packaging 3 - 36 - B4B	
135	DC - 1 - B4B	1 pcs	11/15/19	0.00 0.00	DC - 1 - B4B	DAS 21 NOV 07 2019
					DC - 2 - B4B	
140	QC 21 - FG	1 pcs	11/15/19	0.00 0.00	QC 21 - FG - 21	
					QC 21 - FG - 70	
					QC 21 - SA - 53	
					Broussard	9-89 NOV 07 2019

Part Op 110 - (Pick Kit)

Descriptions: 120 - (QC4- 100% Inspect kits for completeness)

130 - Identify and pack for shipping as per PPP D206-642-512

135 - (Document Control) Photocopy bluefile and create labels per PPP D206-642-512 CHG006

140 - (QC21- Final Inspection - Work Order Release)

Job BOM

Part / Item	Component Name	Quantity	Operation	Container
D206-642-541	Repl.Skid.,High Gear,Std Wearplates Fits LH/RH, DART Tri-Bag	1 pcs (1 ea)	110-Packaging 1 - Pick Kit	321814
K642-512	Saddle	1 pcs (1 ea)	110-Packaging 1 - Pick Kit	5227739

Job Allocations

Operation	Component Part	Required	Inventory	Allocated
110-Packaging 1 - Pick Kit	D206-642-541	1	7	0
	K642-512	1	0	0

Part Specifications

Specifications could not be found.

Plex 10/3/19 9:12 AM Dart.lajeunesse.marie

Entered: _____ Date: _____

WORK ORDER NON-CONFORMANCE / ROUTE UPDATE

Route update only

NCR No.

Job: _____ Part No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐		DEPARTMENT/PROCESS Skid-tube ☐ Cross tube ☐ Eng. (Non-AW) ☐ Engineering ☐ Machining ☐ Small Fab ☐ Prod. Eng. Coord. ☐ Water Jet ☐ Large Fab ☐ Finishing ☐ Rec/Store/Packaging ☐ Supplier ☐ Quality ☐																															
Date : _____		Sequence #: _____		QTY Affected : _____		MRB (QS1042) ☐																													
Description Work Order Deviation				Disposition																															
Completed By				Lead hand / Supervisor																															
				QC / QA Coordinator																															

Root Cause Operator ☐ Manufacturing Process ☐ Equip/Tooling ☐ Handling/Preservation ☐ Material ☐ Product Improvement ☐ Process Improvement ☐ Human Factors ☐		FAULT CATEGORY <table border="1"> <tr> <td>Pressure/Forced</td> <td>Contamination</td> <td>Power Loss/Surge</td> <td>Positioned Wrong</td> </tr> <tr> <td>Bending</td> <td>Misaligned/off center</td> <td>Folio/Program</td> <td>Outside Tolerance</td> </tr> <tr> <td>Crushing</td> <td>BOM/Route</td> <td>Grain Direction</td> <td>Drawing</td> </tr> <tr> <td>Cracks</td> <td>Broken/Damage/Defect</td> <td>Weld</td> <td>Finish</td> </tr> <tr> <td>Crimp/Kink/Ripple/Wave/Twist</td> <td>Incomplete/Unclear Instructions</td> <td>Wrong Stock Pulled</td> <td>Part Lost/Missing</td> </tr> <tr> <td>Marks/Chatter</td> <td>Drill Holes</td> <td>Out of Sequence</td> <td>Misread</td> </tr> <tr> <td>Mislabeled</td> <td>Fit/Function</td> <td>Off-set/Set-up</td> <td></td> </tr> </table>						Pressure/Forced	Contamination	Power Loss/Surge	Positioned Wrong	Bending	Misaligned/off center	Folio/Program	Outside Tolerance	Crushing	BOM/Route	Grain Direction	Drawing	Cracks	Broken/Damage/Defect	Weld	Finish	Crimp/Kink/Ripple/Wave/Twist	Incomplete/Unclear Instructions	Wrong Stock Pulled	Part Lost/Missing	Marks/Chatter	Drill Holes	Out of Sequence	Misread	Mislabeled	Fit/Function	Off-set/Set-up	
Pressure/Forced	Contamination	Power Loss/Surge	Positioned Wrong																																
Bending	Misaligned/off center	Folio/Program	Outside Tolerance																																
Crushing	BOM/Route	Grain Direction	Drawing																																
Cracks	Broken/Damage/Defect	Weld	Finish																																
Crimp/Kink/Ripple/Wave/Twist	Incomplete/Unclear Instructions	Wrong Stock Pulled	Part Lost/Missing																																
Marks/Chatter	Drill Holes	Out of Sequence	Misread																																
Mislabeled	Fit/Function	Off-set/Set-up																																	
		Other/Details: _____																																	



RELEASED
15.10.19 SA

PPP

Part Number	D206-642-514	Box Part Number	MBX104	Dimension	L x W x H 176" x 6.5" x 12.5"
Description	Float Skidtube, RH	Other Packaging	MF6812		MF1612
		Logo Decals	D2728-1		


Packaging Instructions and Decal Placement

D206-642-514


Apply labels D2729-4 and D2728-1 as per drawing.

Wrap float skidtube in plastic bag. Place (4) pieces of MF6812 at the bottom of the box and (2) pieces of MF1612 at each ends of the box. Place float skidtube in the box. Apply MF6812 on top to correspond with bottom foam already in place. Wrap hardware and paperwork in foam, identify, and place in box.

and close box. Add in two pieces of edge board to inside top of skidtube box. Apply Dart tape. Apply strapping after first Dart logo, thereafter applying strapping after every second Dart logo. Add four pieces of edge board, one per angle of box. Staple ends. Tie wrap over top again. Apply clear tape over strapping. Apply label D2729-3 as per instructions in QSI 014.

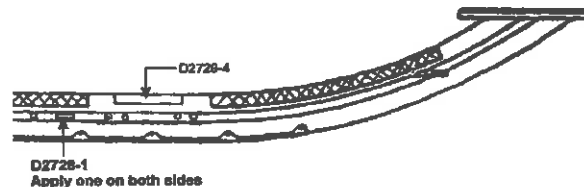

For skidtubes that are manufactured as a PMA replacement part, a Heli-Tech placard and the D2729-4 label must be installed on the skidtube as per drawing below.

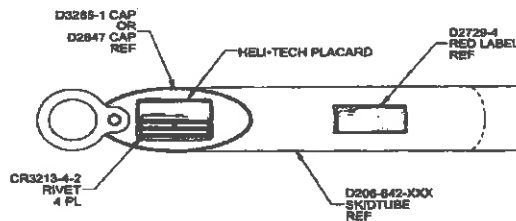

D2729-4

D2729-3

DART			
US #5735484 / CA #2222184 / EURO #0828655			
P/N	D206-642-514	QTY	CHG005
DESC	Float Skidtube, RH	QTY	SH98-4
QTY	BXXXXXX	QTY	SA00475SE
QTY	Bell 206L/L1/L3/L4/407	QTY	



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL.: 1 613 632-5200

FLOAT SKIDTUBE, RH

P/N: D206-642-514

CHG005

B/N: BXXXXXX

Revision: G
Date: 15.10.19

15/10/19